

UNI-FLAT and UNI-CUBE

Universal Shoe Riser and Cube Mount Installation and Use Instructions

Description

These instructions apply to two different products, UNI-FLAT and UNI-CUBE. Only UNI-FLAT is shown in the pictures, but the same principles apply to both products.

This adapter allows the use of some devices, such as the Røde Videomic on camcorders with a high “shoulder” to the side, such as JVC Everio and Panasonic PV-GS300, which have a zoom control that would be obstructed if the Videomic was installed.



Compatibility

This adapter should work on connect any two device that use a standard shoe mount, including Sony's Intelligent Accessory Shoe, and other brand shoe mounts that use the universal shape but add “hot” shoe features. Hot shoe functionality is not passed through. Devices with Sony's Active Interface Shoe are not compatible. To make a compatibility or incompatibility report, please email compat@dm-accessories.com.

 
Handling

When working with this or any other camera or camcorder, be sure to handle them gently. Camcorders have precise internal components that may be damaged when handled improperly. Consult the camcorder's manual for details.

Installation

The base of the adapter slides into the universal shoe from the back or the front, depending on the device. Once the adapter is centered, turn the square top of the adapter by hand until the top is snug and lines up with the direction of the camera. If the tension needs to be adjusted, please use the enclosed adjustment washer kit. Now, shoe-mounted microphones, lights and other accessories can be installed as they normally should.

Before and After Shots with a JVC Everio, UNI-FLAT and Røde Videomic:

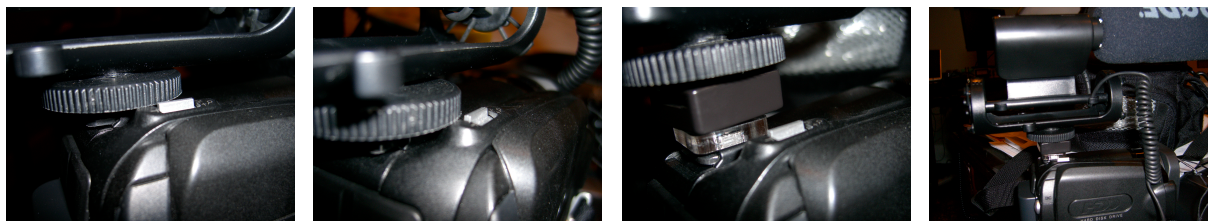

Adapter design and these instructions are ©2007 DM-Accessories. Brand names and model names are trademarks of their respective owners.



DM Accessories
4833 Cherry Valley RD
Middleville MI 49333
USA

<http://www.dm-accessories.com>
sales@dm-accessories.com